ROVING NOZZLE

MFG. NO. 1690031 ROVING NOZZLE

FORM — 1652026
PRINTED IN U.S.A.
746

ROVING VACUUM NOZZLE (Mfg. No. 1690031)

The nozzle attaches to the blower inlet in place of the hose from the mower.

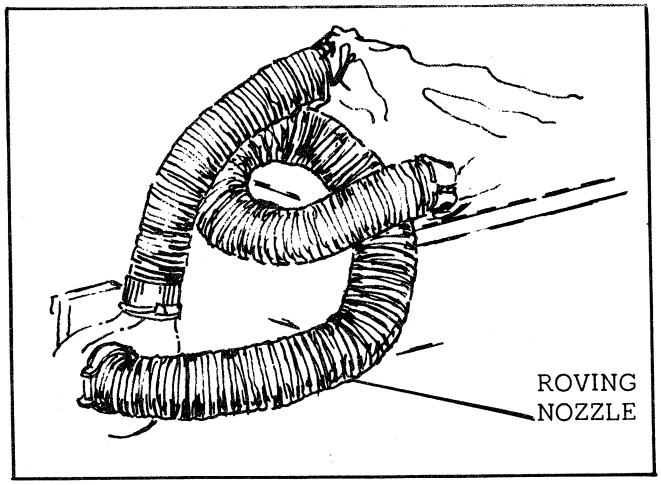

Figure 1.

ASSEMBLY

1. Install the mounting flange and clamp on the plain end of the hose. Tighten the clamp screw securely. (Figure 2) .

2. Install the hose handle clamps the desired distance from the pickup end of the hose and attach the handle (Figure 3).

3. Attach the flanged end of the roving nozzle to the blower housing, seating the flange fully in the notches. (See Figure 2).

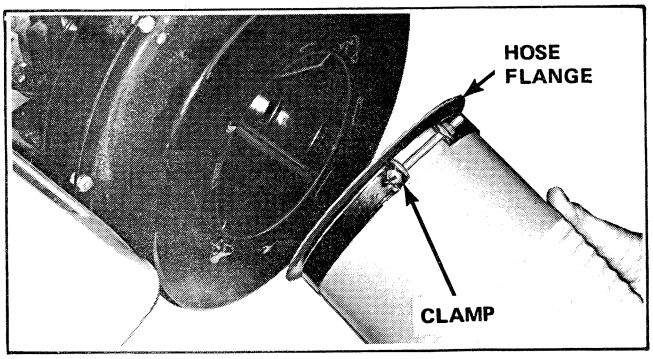

Figure 2.

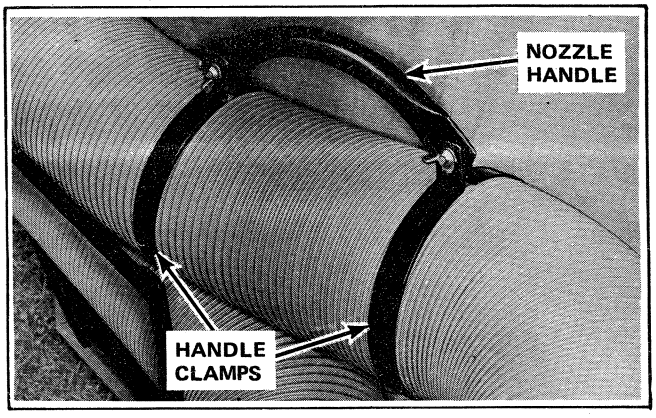

Figure 3.

WARNING

When using the roving nozzle, be sure that the mower blades DO NOT rotate. Check mower drive belt disengagement as follows:

1. Start tractor engine and run at 3/4 speed.

2. Engage mower power take-off by pushing power take-off control handle forward.

3. Maintaining power take-off control handle in engaged position, push down on belt tension lever. See Figure 4. Mower blades should stop rotating and vacuum collector belt continue;

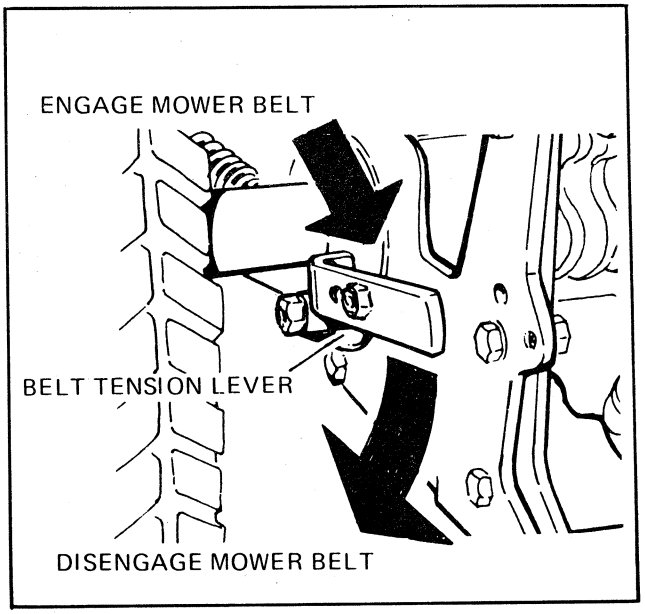

Figure 4.

ROVING NOZZLE

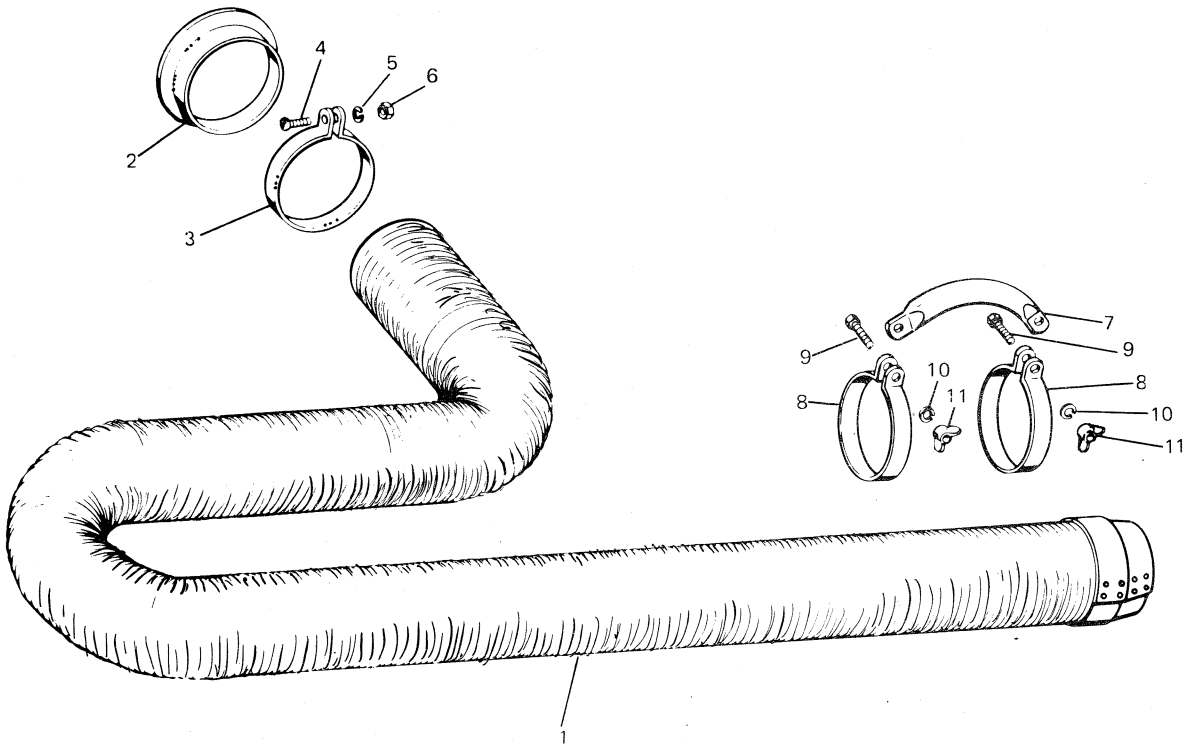

Ref. No.	Part No.	Qty.	Description
1	123127	1	HOSE ASSEMBLY
2	123111	1	FLANGE, Hose
3	123065	1	CLAMP, Hose
4	928866	1	SCREW, round hd. slotted, 1/4-20 x 3
5	916964	1	LOCKWASHER, 1/4
6	916622	1	NUT, 1/4-20
7	123129	1	HANDLE, Hose
8	123128	2	HANDLE, clamp hose
9	917397	2	CAPSCREW, Hex, 5/16-18 x 3/4
10	917356	2	LOCKWASHER, 5/16
11	916952	2	NUT, Wing, 5/16-18

Figure 5.